FALCON 500G2

VICKERS, MICRO VICKERS, KNOOP & BRINELL

CINNOVATEST

FALCON SOC





FALCON 500G2

Unparalleled configuration freedom...

The FALCON 500G2 offers a leading technology base for manual, automatic or fully automated testing of Micro and Macro Vickers, Knoop or Brinell assignments.

With a wide choices of test force configurations, answering any possible imagination, the FALCON 500G2 can be completed with fully integrated hardware options to assure a match with the particular testing tasks of your industry. Coming from a leading edge of mechanical design, the load cell, closed loop system of the base unit can be completed with manual or digital micrometers or for more testing comfort, with motorized CNC stages.

The unique motorized ball bearing Z-axis provides accurate height movement and high speed autofocus. The user interface, provides manual & automatic measurement and a wide selection of standard and optional testing applications, supporting a high resolution (HD) camera and a second (optional) full work stage overview camera.




Select your required test force range. 0.1gf 5gf 2kgf 0.1gf 10gf 2kgf 0.1af 10af 10kaf 10qf 31.25kgf 10qf 200qf

Upgrade now, later, at any moment,

EXTENSION A	0.1gf - 1gf	EXTENSION
EXTENSION D	2kgf - 10kgf	EXTENSION

* Fixed force range, can not upgrade.

HIGHLIGHTS

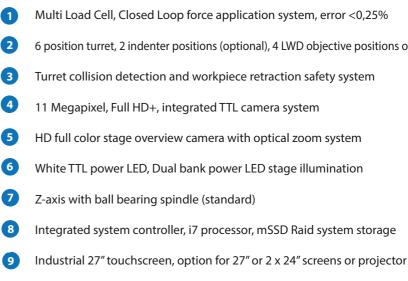

10



- 6 position turret, 2 indenter positions (optional), 4 LWD objective positions of which 2 installed
- Top-class replaceable body parts, shock proof ABS covers

BOUNDLESS INNOVATION

OPTIONAL Stage overview camera with autofocus

Z-axis positioning precision controller


Observe, Think, Try, Change...

Rigidity and perpendicular indenter positioning are crucial to obtain Vickers indents with a perfect geometry. Re-invented, adjustable indenter actuators provide maintenance free, smooth force application, easy to access and easy to replace indenters. Optional XY-stage overview camera reduces application set up time dramatically.

13

Multi load cell, ball bearing, force actuator

> 6 position turret with optional ringlights for Brinell

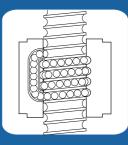

Z-AXIS BALL SCREW Precision movement

TECHNOLOGY

Changing the game...

6 POSITION PRECISION TURRET & OPTICAL SYSTEM

The 6 position turret is supplied as a standard feature on all 500G2 models and allows to install indenters for Vickers, Knoop and Brinell (balls 1mm 2.5mm & 5mm) testing. The FALCON 500G2 has four objective positions. Depending on the configuration, choose from 2.5X, 5X, 10X, 20X, 50X, 100X that, in combination with the HD camera, with digital zoom, provide crisp images.

STAGE OVERVIEW CAMERA (OPTIONAL)

Create magnified sample overview with the standard on-board, autofocus, optical & digital zoom overview camera. The field of view of this sophisticated full color camera system does not limit you to one field of view, but gives a ZOOM range from 40 x 30 up to 150 x 110mm without the need to use time consuming scan and stitch functions.

Once the viewing area needs to be larger than the zoom range, scanning and stitching can be selected to create full stage overview. Click and go is one of the standard testing features of the overview camera. Just click randomly on designated area's and push "start". All tests run automatically. The pattern video overlay function eases positioning of multiple test rows or patterns across the specimen. The pattern video overlay scales automatically with every magnification, stepless, while the zoom camera decreases or enlarges the overview.

DYNAMIC Z-AXIS CONTROL & COLLISION DETECTION

A high end ball bearing Z-axis spindle is one of the very unique functions. Z-axis displacement at an accuracy of micron's supports ultra-fast auto focus. Z-axis controls are nearly limitless; CNC as a result from a test program, by touchscreen indicators, by the scroll wheel of the mouse, by fast up and down buttons or from a scroll wheel on the front of the machine. Speed control related to your own movement; (0.01 up to 20 mm/s). To avoid any collision between the workpiece and the turret, the Z-axis is controlled by a flawless collision detection and Z-axis retraction system. So neither the tester nor the workpiece are exposed to any damage.

HIGH SPEED CNC MOTORIZED XY-STAGE (OPTIONAL)

Save time and improve efficiency with one of the high speed, highly accurate motorized XY-stages. Available in variable sizes from standard, to large and extra-large. Enable automated sequencing of multiple samples. The ultra-high accuracy and repeatability guarantee precise positioning of indents and allow re-evaluation of any measurement points in batch or single view. Repeatability within 3 micron.



5 27" HD TOUCHSCREEN OPERATOR INTERFACE

All machine control and process workflow can easily be operated from the 27" industrial capacitive touchscreen. At choice a 27" or 2x 24" screen(s) can be connected.

SHOCK RESISTANT ABS MACHINE COVERS

The tester is fitted with a high-end external shell structure. The shock proof and damage resistant ABS machine covers can withstand the harshest environment.

7

AUTOMATIC IMAGE


1


2





•

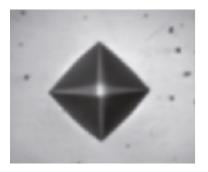

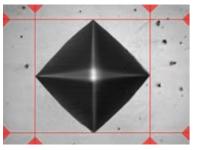


1 AUTO FOCUS

Fast & precise, observe how IMPRESSIONS[™] finds focus from a large distance, as far as the travel of the Z-axis allows. Algorithms used for close distance autofocusing set new standards in AF speed.

2 AUTOMATIC MEASUREMENT

Manual positioning of filar lines is no longer required. IMPRESSIONS[™] refined measurement algorithms detect indents even on very poor or scratched surfaces and measure the relevant indent dimensions according to standards. Stay in control by switching to manual measure mode and have the option of adjusting measurements by touching the screen or using the mouse. Filar lines can be colored to give the best contrast against the specimen's surface. To assure that measurements meet relevant standards on symmetry, enable the automatic indent check. All hardness values can be converted to other scales according to ISO 18265, ISO 50150, ASTM E140. **3** ILLUMINATION SETTINGS

IMPRESSIONS[™] software automatic illumination system adapts to the correct illumination regardless of the sample surface quality, wherever on the sample, independent from material (steel, carbide, coated or ceramic). Contrast, Brightness and program, can be set automatically for each measurement or controlled manually. Sharpness can be stored with the pre-determined test.

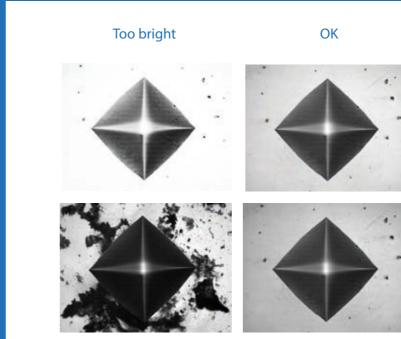

Irregular surface

Regular surface


4 REFINED IMAGE DETECTION

Complex, refined algorithms ensure reproducible measurements on different materials and even on scratched and damaged surfaces.

Evaluate whatever you want, -because what gets measured, gets produced...

Too dark



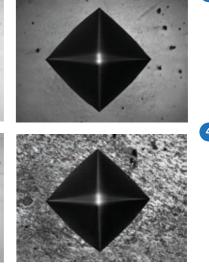

Poor surface

purpose of software is to trol complexity...

re that optimizes user comfort with a wide range of standard functionality such measurement, auto-focus, reporting, test program storage, and many more.

ndard applications would not be sufficient, IMPRESSIONS™ nat can be installed as plugins, later, at any moment. During u need at that moment. Widen your options at any moment to install optional functionality. As easy or simpler than

IMPRESSIONS v4

Next gen workflow & tester control...

Just buy a software release ticket, and your tester has added functionality, regardless where it is located. A revolutionary system taking care of all your needs. In this way we keep the learning curve, the process to work efficiently with our software limited to the level of "need to have" and "need to know". The proportion of installed and activated software never needs to be more than your requirements.

On the higher end, IMPRESSIONS 4 connects flawlessly with quality control systems such as QDAS, exports files in CVS, XML or other formats and if your requirement is not standard, our team of engineers will efficiently find ways to handle your data properly. Bespoke solutions such as connectivity to robotic systems are standard solutions for INNOVATEST[™].

Unique to IMPRESSIONS[™] 4 is a choice for screen size and position. Whether you wish your interface to be in portrait mode or landscape, all functionality is supported in both positions. For table top solutions like testers in laboratories, users often opt for landscape screen(s).

On the shopfloor the large landscape screens are often an unwanted component either requiring a table top or machine mounted bracket taking a lot of space and cables to deal with. IMPRESSIONS 4 leaves you the option to go for landscape or for portrait mode on a large selection of our machines.

STAP

For the FALCON 500G2, INNOVATEST recommends the 27" industrial quality landscape screen operated by both touch as well as mouse and keyboard. One screen is standard included with the hardness tester, optional is the Dual view function, these are 2 x 24" industrial quality landscape screens. New applications are added to IMPRESSIONS™ on a regular basis; while INNOVATEST provides 10 years free updates, upgrades to more functionality or new additions can be purchased at any time.

Ut Minur 1


15 2



TIME REDUCING SOFTWARE SOLUTIONS...

1 PATTERN EDITOR


The IMPRESSIONS[™] pattern editor allows the user to create any number of test patterns with a large number of variable settings. Create test patterns with great precision and freedom. Verify the settings in the preview mode. Drag & drop patterns from one test sample to another sample. Live vision technique over zoom overview camera, no image stitching required.

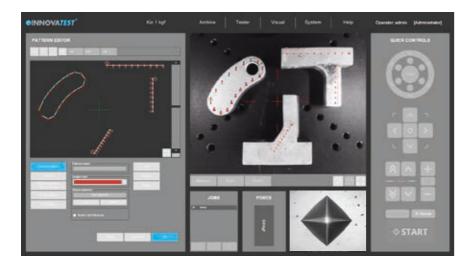

Combine different patterns and even different test forces in one program, and run them fully automatically. All test points can be identified individually or to customer specifications. The label is shown in the test result list and in the test results overview and in the results print out. An important function for sample analyses at the end of a test and in the future for review of previous tests.

2 CHD, SHD, NHD


How do you increase throughput in your lab? Make the most common testing design as easy to set up as possible to perform automatically and still adhere to the applicable standards. CHD/SHD/NHD testing can be started directly from the surface view or from the overview. Additional core points of hardness can be defined separately for NHD measurements.

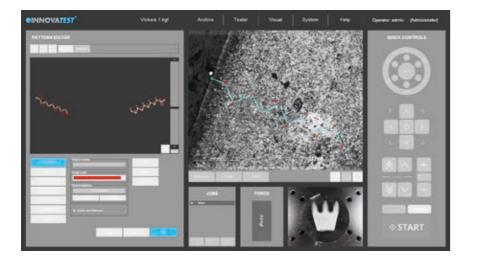

The distances of test points are automatically set to a minimum distance, following the standard, to assure correct testing is conducted. Time saving test mode "complete all indentations – then evaluate" and "auto-stop" to complete test series as soon as the lower hardness limit has been reached. Report Generator is enhanced with reporting features for this application.

WELD INSPECTION (ISO 9015)

This especially developed tool enables you to conduct hardness testing on welded parts or segments according to ISO standard. Setting up the pattern according to the requirements becomes "easy-to-do", due to pre-set test points in the different zones of the weld and automatic correlation between test points. The system will run a fully automatic test procedure and display and record the results accordingly. The Report Generator is enhanced with reporting features for this application.

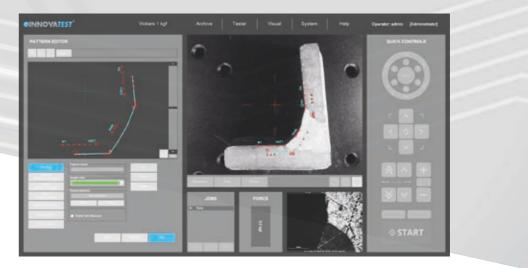

4 HARDNESS OF SCREW THREAD DECARBONIZED ZONE (ISO898-1)


A specialized software tool of IMPRESSIONS[™] allows you to set up and conduct fully automatic testing as per ISO898-1 for screw thread measurement of (de)-carbonized part.



The Report Generator is enhanced with reporting features for this application.


5 EDGE DETECTION

Technology that automatically or at a mouse click recognizes the edge of your sample. This helps to determine and fix the desired starting position for CHD or other pattern testing jobs.

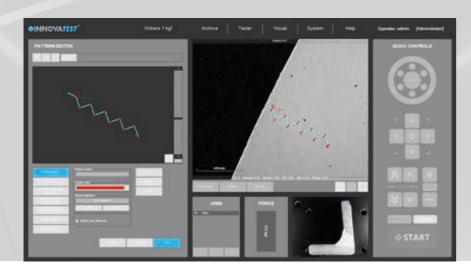

2D HARDNESS CHART


The application "Plane hardness chart", is also referred to as Color Mapping happens to be the perfect tool for securing the detail of the effective hardness distribution over the total sample cross section of heat treated samples. An important feature in material exploration, weld testing or in damage analysis.

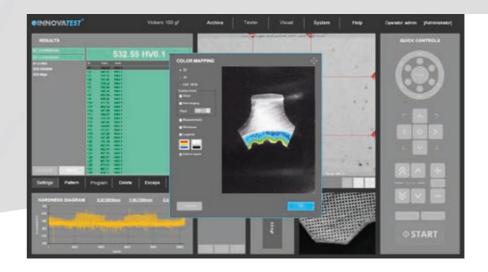

3D HARDNESS CHART

6 AUTOMATIC CONTOUR SCANNING

This application scans the entire outline (or partial) area of a sample. The function can be used with an objective by using the overview zoom camera for high speed scanning. The system scans the entire outline defined and stores all relevant data in the test program.

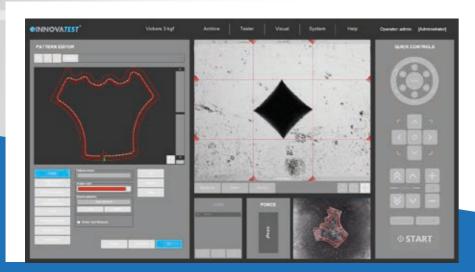


In addition to 2D graphic diagrams, the system can also automatically generate 3D diagrams. 2D and 3D hardness charts are included in one application.

Subsequently, a limitless number of test points can be inserted into the scanned image, or be set at selected distances (offset), relative to the edge. This advanced feature enables the hardness testing procedure to be performed c. An excellent featured combined with 2D or 3D hardness mapping, also known as "plane hardness chart".



S Kic CRACK MEASUREMENT

For those requiring more in depth knowledge on materials behavior, wishing to study material fracture and fatigue, crack growth can be predicted and measured by using the Kic application.

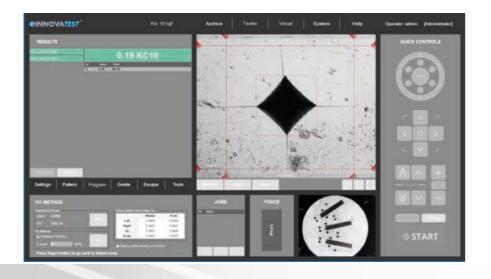


The software supports Kic crack detection under load with customized Kic result reporting. By way of one or both methods, Palmqvist or Median / Radial, fracture toughness is now a repeatable and reproducible test across multiple operators.

11 USER DEFINED PROGRAMS



For repeating jobs, IMPRESSIONS[™] utilizes the option of setting up and storing custom test programs. For each task, a "job" can be created. All application specific parameters, such as hardness scale, force, dwell-time, pattern, conversion and the report template are stored in the same program.

12 REPORT GENERATOR

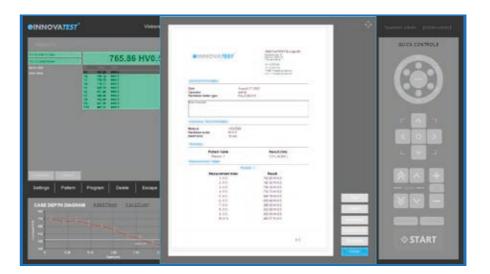

All this information or having the ability to only have what you need reported, we call this our Report Configurator. You decide how much or how little you report by PDF or laser printer. We even keep it simple by choosing export to CSV file, to a thumb drive or network file location. Data management at its best!

10 SNAPSHOT FUNCTION



This handy function in IMPRESSIONS[™] allows you to make screen captures of the viewing area by way of objective view and/or Overview camera. It gives the opportunity to store such images with comments or to paste them into the report generator for further processing.

Imagine having a report created for you that includes: Your company name, address, contact information, labeled results related to patterns or sequential, pictures of your optical measurements, stitched images, notes section for each result or pictures, rendition of the pattern performed, overview picture of your pattern on your sample, full statistics, summary of your results, go nogo results, Pass or fail...

VIBRATION | TEMPERATURE | HUMIDITY

MONITORING

Our world is going through processes that have influence on climate and environment. More often we see extreme heat, extreme cold and periods of extreme rain. To assure that such disturbances of nature do not coincidentally effect your measuring or testing results, we have prepared our machines to climate change and forces of nature.

The integrated high precision

accelerometer electronics

continuously monitor your

tester's stability environment.

While the tester has vibration

isolators (machine dampers) installation environment is

often not ideal. Think of heavy traffic, loaded fork lift trucks, excentre presses or other equipment making shop floor installation a base of trouble.

13 **VIBRATION & EARTH QUAKE MONITORING**



For certain countries/area's in the world where light earthquakes are so common that they are hardly noticed, the vibration monitoring system will give a warning message and stop the hardness testing process to avoid incorrect readings.

14 **TEMPERATURE & HUMIDITY MONITORING**



Extreme high or low temperatures might not only effect the hardness readings of your machine (think of installation in extremely warm countries or nearby furnaces) extreme humidity might even damage the sensitive electronics.

BARCODE & QR SOLUTIONS

IDENTIFICATION

The basic function of the barcode reader is to load data in to determined user fields. 15 The BAR | QR code module of INNOVATEST connects the machine to a database or network environment loading samples and data.



In the above application, a turbo part has been engraved with a QR code. Extra challenging was the fact that the QR code was engraved in a high polished part of the turbo shaft.

All data for the particular turbo part was fixed in the underlaying QR code. The scanner loads all customer data in the hardness testing machine and assures that the testing outcome is included in the particular test report database, fully automatic.



METALLOSCOPE™ METALLOGRAPHY SOFTWARE

The objectives on the 500G2 make the hardness tester into an excellent highly automated metallurgical microscope. Metallographic studies are of key importance in the manufacturing process of metals and steel, in the aerospace and automotive industry, in mechanical engineering, construction and in the manufacturing of a vast number of industrial and consumer products.

Microscopy is an indispensable feature of every metallographic lab, whether you investigate damages, develop novel alloy materials or perform quality control to ensure the purity of steel. The measurement of certain parameters such as volume fraction, coating thickness and grain size is specified in strict standards and norms.

Metallography is used to investigate metals from copper and titanium to iron, steel and alloys of every description. These investigations can now be performed quantitatively and reliably using the INNOVATEST Metalloscope[™] 1 software module, running on most of our higher-end hardness testing machines^{*}. *(features of Metalloscope[™] 1 software depend on the particular tester model).

The microstructure of metals has a significant influence on properties such as strength and corrosion resistance. Therefore, a detailed investigation of the microstructure with the help of microscopy is central to metallographical disciplines as well as many industrial applications.

GRAIN SIZE

LSULTS		SANT VOLUME FRACTION CONTINE THECOMESS COMMENTED SETTINGS THE
a.	Berthins"	COUNTER
NADE D. 2021725104436.Ptv		STRUCT BRANKE
weat to and that we firm		
		VI- HACKARD
		A A A A A A A A A A A A A A A A A A A
- TOCAL		
NISTOGRAM		
HISTOGRAM		

Grain size;

The grain size index can be calculated in various 1 or 2 dimensional way; using a 1-dimensional method (from the number of grain intercepts per mm) or a 2-dimensional method (from the number of grains per mm2). Line profile: 1-dimensional grain size index calculation by counting the number of grain intercepts on a line. Hexagonal grid: 2-dimensional grain size index calculation using a superimposed hexagonal grid or single grains calculation by counting the number of the image (blue box).


Hardness tester and metallurgical microscope.

Basic metals undergo specific treatment in order to prepare them for particular applications and to improve their characteristics, for example by adding alloying elements. In many cases, the microscopy investigation focusses on the correlation between the resulting microstructure and the material properties.

VOLUME FRACTION

	VOLUME FANCTIONE: CONTING THEOREES GRAIN SIZE
ESSALTS ALLENGAGESCOM	

COATING THICKNESS

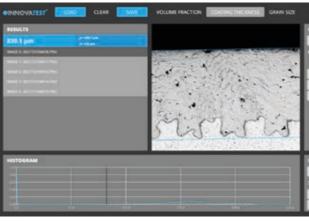

The FALCON 500G2 is basically an upright, brightfield and darkfield microscope. Contrast methods of reflected light brightfield result are best suited to analyze the microstructures of etched surfaces. Recognizing grain boundaries, you can draw conclusions on grain sizes, phases and structural constituents. Impurities and structural constituents, such as graphite in cast iron, prior to etching are getting visible.

Reflected light darkfield shows up mechanical surface faults such as fracture sites, pores and inclusions as well as cracks, scratches and cavities. In combination with the FALCON 500G2 automation, the system provides in maximum efficiency for both hardness testing and materials inspection.





Volume fraction;

Various methods integrated; the example shows a sample consisting of ferrite (black material) and austenite (white material). Pixel counter: calculation based on histogram-guided image thresholding. Two automatic thresholding algorithms in addition to manual thresholding. Grid counter calculation using a superimposed grid. Each grid point can be assigned to the black material or white material. Initial values (black or white) are assigned automatically, but can be toggled manually. Grid positions are calculated by defining the number of grid points or the grid spacing.




Coating thickness:

Calculate the thickness of a coating layer. This can be a single thickness or a mean thickness with standard deviation or a coating contour. Calculation using two parallel lines. The resulting coating thickness is the distance between these lines. Calipers can be rotated, automatic or manual. Coating contour: coating thickness calculation based on a number of measurement points. Contour edges are drawn semiautomatically and the number of measurement points can be selected by the user.




The FALCON 500G2 is designed in such a way for the large selection of fixtures and specimen holders to be used on the CNC XY-stage. The frame size allows a large workspace accomodation. Regardless of the shape of a particular workpiece, the accessories list and corresponding software applications enable to test almost any component and part.

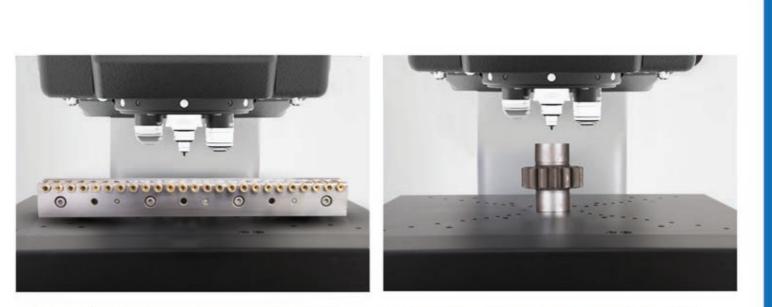





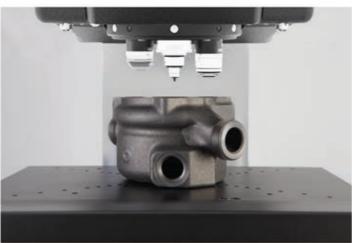



DINNOVATEST




FALCON 500G2

CONFIGURE NOW :

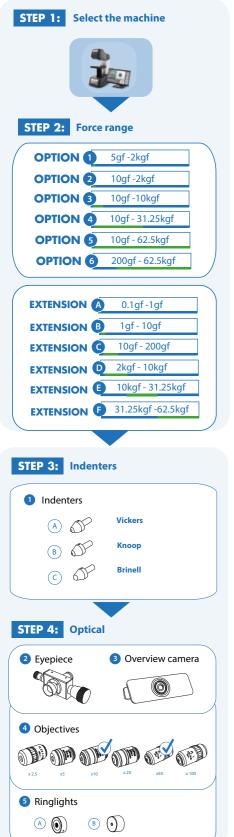

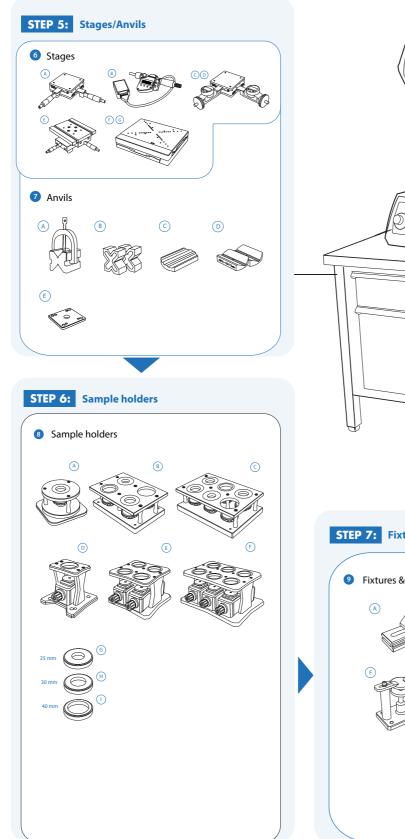

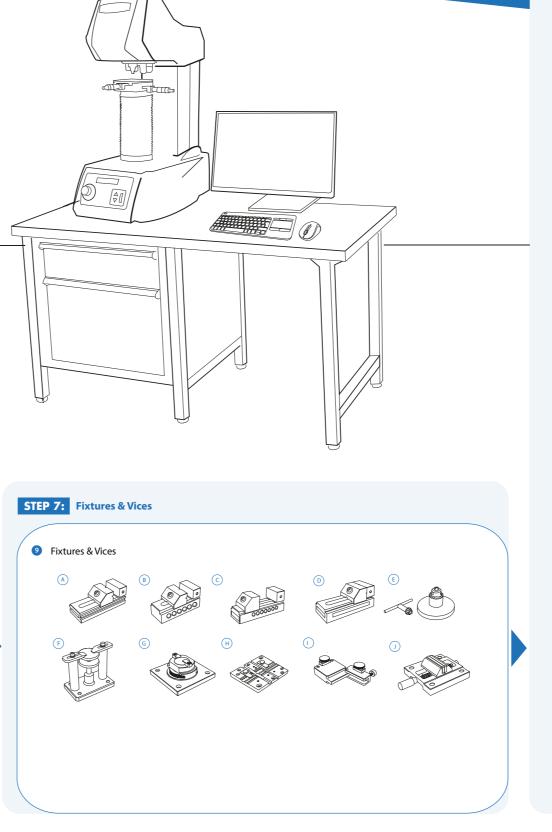





STEP 8: Software



UAL ON-SCREE



REPORT SENERATO





 \bigoplus

KIC CRACK

DRAWING & MEASURING APPLICATION

HARDNESS OF SCREW THREAD (ISO 898-1)

SNNS.

CHD, SHD, NHD

2D / 3D RDNESS CHART



AUTOMATIC EDGE DETECTION



USER LEVEL



AMMUNITION TESTING PATTERN







BARCODE &













AUTOMATIC CONTOUR SCANN



DUALVIEW TECHNOLOG



ARDNESS OF PING SCRE (ISO 2702)





VIBRATION, TEMPERATURE & HUMIDITY MONITORING





25

Not all accessories are displayed on this page. Full details can be found on the Order details page.

ORDER DETAILS

FALCON 500G2



FALCON 500G2 Micro hardness tester, IMPRESSIONS [™] 4	FALCON 500G2
OPTION 1: Force range fixed 5gf - 2kgf (can not be extended)	SLFFG2O1
OPTION 2: Force range 10gf - 2kgf	SLFRG2O2
OPTION 3: Force range 10gf - 10kgf	SLFRG2O3
OPTION 4: Force range 10gf - 31.25kgf	SLFRG2O4
OPTION 5: Force range 10gf - 62.5kgf	SLFRG2O5
OPTION 6: Force range 200gf - 62.5kgf	SLFRG2O6
Extension A: Force range extention 0.1gf - 1gf (requires extension B)	SLFRG2A
Extension B: Force range extention 1gf - 10kgf	SLFRG2B
Extension C: Force range extention 10gf - 200gf	SLFRG2C
Extension D: Force range extention 2kgf - 10kgf	SLFRG2D
Extension E: Force range extention 10kgf - 31.25kgf	SLFRG2E
Extension F: Force range extention 31.25kgf - 62.5kgf	SLFRG2F
Indenter actuator post (2nd indenter position) factory installed	SA-70-0003
Dual optical channel, electronic microscope and camera system, can be used similtanuously	SA-70-0004
Plug & Play prepaired, calibration, sea & airworthy packing in "non coniferous wood" material	P&PSEAPACK30

ACCESSORIES	
STEP 3 Indenters	
Vickers A Micro Vickers Indenter Ø3mm ISO/ASTM certifie	UPI/8105
Knoop B Micro Knoop Indenter Ø3mm ISO/ASTM certified	UPI/8205
Brinell C Brinell Indenter 1mm. Includes 1 carbide ball. Ø3r	nm. ISO & ASTM certified UPI/7001
Brinell Indenter 2.5mm. Includes 1 carbide ball. Ø3	nm. ISO & ASTM certified UPI/7006
Brinell Indenter 5mm. Includes 1 carbide ball. Ø3r	nm. ISO & ASTM certified UPI/7011
STEP 4 Optical	
2 Eyepiece Electronic digital eyepiece with 15x magnification	n AS-EYEPIECE/03
Overview Camera HD Overview camera. Full view zoom camera + s	oftware functionality SA-05-0051
Objectives 2.5x Long Working Distance objective	ASSUN-OBJ2.5X
5x Long Working Distance (LWD) objective	BM-05-0001
10x Long Working Distance (LWD) objective	BM-05-0002 STANDARD
20x Long Working Distance (LWD) objective	BM-05-0003
50x Long Working Distance (LWD) objective	BM-05-0004 STANDARD
100x Long Working Distance (LWD) objective	BM-05-0005
S Ring lights A Crystal [™] Clear LED ring light, multi use for 2.5x c	bjectives SA-05-0021
B Crystal [™] Clear LED ring light, multi use for 5x ob	SA-05-0013


//////


STEP 5	Stages/Anvils			
0	Stages	A	Manual X-Y stage with analogue metric micrometers, 100x100mm Displacement: 25x25mm, scale 0.01mm, max load 60kg	UN-XYSTAGE/115
			Manual X-Y stage with analogue metric micrometers, 100x100mm Displacement: 25x25mm, scale 0.01mm, max load 100kg	UN-XYSTAGE/120
			Mounting plate	AS500XL-450-02
	(B	Digital micrometer, for manual X-Y stage, Displacement: 25mm, resolution 0.001mm	IMP-DIGMIC
	(C	Manual iSMART™ stage, 150x150mm, Displacement: 50x50mm	BM-08-0057
	(D	Digital control unit for Manual iSMART [™] stage, 25mm travel	BM-08-0058
			Digital control unit for Manual iSMART [™] stage, 50mm travel	BM-08-0059
	(E	Manual X-Y stage with analogue metric micrometers, 180x160mm Displacement: 25x25mm, scale 0.01mm, max load 300kg	UN-TESTTABLE/030
			Manual X-Y stage connecting plate	UN-TESTTABLE/ 030FAPL
	(F	Motorized CNC X-Y stage, 257x188mm, total load up to 400Kgf max Displacement: 120x120mm, resolution 0.001 mm, repeatibility +/-0.003mm	UN-XY571212TT
			Motorized CNC X-Y stage, 357x208mm, total load up to 400Kgf max Displacement: 220x120mm, resolution 0.001mm, repeatability +/- 0.003mm	UN-XY572212TT
	(G	iSMART [™] motorized CNC X-Y stage, 215x160mm, total load up to 400Kgf max. Displacement: 75x75mm, resolution 0.001mm, repeatibility +/-0.0015mm	MA-XY7575S
			iSMART [™] stage, 260x205mm, total load up to 400Kgf max. Displacement: 120x120mm, resolution 0.001mm, repeatibility +/-0.0015mm	MA-XY1212S
			iSMART [™] stage, 360x205mm, total load up to 400Kgf max. Displacement: 220x120mm, resolution 0.001mm, repeatibility +/-0.0015mm	MA-XY2212S
	Cable sets, mounting & Connectivity for motorized stage		Cable set for connecting CNC stage to embedded driver (1 set for 2-axis) 105cm	UN-XY2CABLENBS
			iSMART [™] X-Y stage connection cable	CE-99-0030
0	Anvils	A	V block with bracket 40x40x50mm (LxBxH)	UN-VBLOCK404050
	(B	Steel, cross type, (X) V-block 60x120x100mm 8-90mm pair	UN-CROSSBLOCK01
	(C	Small V-Anvil 3-20mm requires base plate (Requires Manual/Autom. X-Y stage)	UN-ANVILSV/105
	(D	Large V-Anvil 20-75mm requires base plate (Requires Manual/Autom. X-Y stage)	UN-ANVILLV/106
	(E	Base plate for V-anvils un-anvilsv/105 & 106	UN-VANVILBASEPL

Image: Sample holders A 1 position sample holder, for 1 embedded sample, diameter 50mm or 2" UN-ESH1 Image: Sample holder A position sample holder, for max. 4 embedded samples, diameter 50mm or 2" UN-ESH4 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" UN-ESH6 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" BM-08-0052 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" BM-08-0053 Image: Sample holder, for max. 4 embedded samples, diameter 50mm or 2" BM-08-0054 Image: Sample holder, for max. 4 embedded samples, diameter 50mm or 2" BM-08-0054 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" BM-08-0054 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" BM-08-0054 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" BM-08-0054 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" BM-08-0054 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" BM-08-0054 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" BM-08-0054 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" BM-08-0054 Image: Sample holder, for max. 6 embedded samples, diameter 50mm or 2" BM-08-0054 </th <th></th>	
Image: constraint of the second sec	
I position sample holder, for 1 embedded sample, diameter 50mm or 2"BM-08-0052II position sample holder, for max. 4 embedded samples, diameter 50mm or 2"BM-08-0053III of the position sample holder, for max. 6 embedded samples, diameter 50mm or 2"BM-08-0054III of the position sample holder, for max. 6 embedded samples, diameter 50mm or 2"BM-08-0054III of the position sample holder, for max. 6 embedded samples, diameter 50mm or 2"BM-08-0054III of the position sample holder, for max. 6 embedded samples, diameter 50mm or 2"BM-08-0054III of the position sample holder, for max. 6 embedded samples, diameter 50mm or 2"BM-08-0054III of the position sample holder, for max. 6 embedded samples, diameter 50mm or 2"BM-08-0054III of the position sample holder, for max. 6 embedded samples, diameter 50mm or 2"BM-08-0054III of the position sample holder, for max. 6 embedded samples, diameter 50mm or 2"BM-08-0054III of the position sample holder, for max. 6 embedded samples, diameter 50mm or 2"BM-08-0054III of the position sample holder, for max. 6 embedded samples, diameter 50mm or 2"BM-08-0054III of the position signal position ring 25mmUN-ESH125IIIIII nesert reduction ring 30mmUN-ESH125IIIIII nesert reduction ring 1/4"UN-ESH125IIIIII nesert reduction ring 1,5"UN-VEE/210IIIIIII nesert reduction ring 1,5"UN-VICE/210IIIIIII Polished precision vice with lock down system, jaw width 36mm, opens 42mmUN-VICE/210III Polished precision vice with lock down system, jaw width 75mm, opens 100mmU	
Interfacewith front operation elevator knobInterfaceImage: Image: Ima	
Image: Control of the second	
Image: Constraint of the section of	
Image: Constraint of the constra	
Initial Content of Content o	
Insert reduction ring 1"UN-ESHI1Insert reduction ring 1/4"UN-ESHI125Insert reduction ring 1,5"UN-ESHI15Fixtures & vicesPolished precision vice with lock down system, jaw width 25mm, opens 20mmUN-VICE/210Fixtures & vicesPolished precision vice with lock down system, jaw width 36mm, opens 42mmUN-VICE/215Pixtures & vicesPolished precision vice with lock down system, jaw width 36mm, opens 75mmUN-VICE/220Pixtures & vicesPolished precision vice with lock down system, jaw width 75mm, opens 75mmUN-VICE/230UN-VICE/230UN-VICE/230UN-VICE/230Polished precision vice with lock down system, jaw width 75mm, opens 100mmUN-VICE/230UN-CLAMP/105UN-CLAMP/105Inimetal clamp	
Insert reduction ring 1 1/4"UN-ESH1125Insert reduction ring 1,5"UN-ESH115Insert reduction ring 1,5"UN-ESH115Insert reduction ring 1,5"UN-URESH115Insert reduction ring 1,5"UN-VICE/210Insert reduction ring 1,5"Insert reduction ring 1,5"Insert reduction ring 1,5"UN-VICE/210Insert reduction ring 1,5"UN-VICE/220Insert reduction ring 1,5"UN-VICE/230Insert reduction rice with lock down system, jaw width 75mm, opens 100mmUN-VICE/230Insert reduction rice with lock down system, jaw width 05mmUN-VICE/230Insert reduction for Universal Clamp & Leveling DeviceUN-CLAMP/105Insert reduction for Universal Clamp & Leveling DeviceUN-CLAMP/115Insert reduction for Universal ClampUN-CLAMP/115	
Insert reduction ring 1,5"UN-ESHI15STEP 7Fixtures & vicesPolished precision vice with lock down system, jaw width 25mm, opens 20mmUN-VICE/210Fixtures & vicesAPolished precision vice with lock down system, jaw width 36mm, opens 42mmUN-VICE/215General ControlPolished precision vice with lock down system, jaw width 48mm, opens 75mmUN-VICE/220General ControlPolished precision vice with lock down system, jaw width 75mm, opens 100mmUN-VICE/230General ControlPolished precision vice with lock down system, jaw width 75mm, opens 100mmUN-VICE/230General ControlAxle chuck 500 series for cylinder parts, dia. 0.4mm to 5mmUN-XLECHUCKGeneral ControlUniversal Clamp & Leveling DeviceUN-CLAMP/105General ControlThin metal clampUN-CLAMP/115	
STEP 7Fixtures & vicesImage: Construction of the con	
Fixtures & vicesAPolished precision vice with lock down system, jaw width 25mm, opens 20mmUN-VICE/210BPolished precision vice with lock down system, jaw width 36mm, opens 42mmUN-VICE/215CPolished precision vice with lock down system, jaw width 48mm, opens 75mmUN-VICE/220DPolished precision vice with lock down system, jaw width 75mm, opens 100mmUN-VICE/230CAxle chuck 500 series for cylinder parts, dia. 0.4mm to 5mmUN-XLECHUCKLUniversal Clamp & Leveling DeviceUN-CLAMP/105UThin metal clampUN-CLAMP/115	
BPolished precision vice with lock down system, jaw width 36mm, opens 42mmUN-VICE/215CPolished precision vice with lock down system, jaw width 48mm, opens 75mmUN-VICE/220DPolished precision vice with lock down system, jaw width 75mm, opens 100mmUN-VICE/230CAxle chuck 500 series for cylinder parts, dia. 0.4mm to 5mmUN-AXLECHUCKCUniversal Clamp & Leveling DeviceUN-CLAMP/105IUN-CLAMP/115UN-CLAMP/115	
Image: Constraint of the constraint	
Image: Construction of the construc	
Image: Constraint of the second of the se	
F Universal Clamp & Leveling Device UN-CLAMP/105 G Thin metal clamp UN-CLAMP/115	
Image: Constraint of the second se	
(H) V groove clamp for small round parts dia.0.8-5mm UN-VGROOVE- CLAMP	
UN-WIRE/105	
J Small parts vice jaw width 55mm, open 50mm, self centering UN-VICE/115	
STEP 8 Software	
Additional Software Manual on-screen measurement UN-MANM STANDAR	STANDARD
Automatic measurement UN-AUTOM STANDAR	STANDARD
Automatic focussing UN-AUTOFOC STANDAR	STANDARD
Report configurator UN-REPORTA STANDAR	STANDARD
Snapshot function UN-SNAPSH STANDAR	STANDARD
Advanced 3 axis coordinate & free style indent pattern configurator, for UN-TESTPAT01 motorized stage only	
Advanced 3 axis coordinate & free style indent pattern configurator, + CHD, UN-TESTPAT02 SHD, NHD and edge detection, (supports manual & digital micrometer stages only) UN-TESTPAT02	
Image stitching, composes full stage overview, and detailed sample overview.UN-IMST01High resolution magnification of designated test area.Requires a motorized stage.	
KiC crack detection under load. Palmqvist & Median / Radial fracture toughness UN-CRKPAR	
Automatic Contour scanning UN-CSCAN	
2D / 3D hardness scanning (mapping, includes automatic contour scanning) UN-CSCAN2D3D	
Drawing and measuring (distance & angles) application UN-DRMEAS	


	DualView Technology, 2 viewing screens software, screen, cables, Europe and US power cable included, 2x 24 "Industrial LCD screens included	UN-DVTECHSET24	
	Automatic edge detection	UN-EDGEDTC	
	ISO 898-1 screw thread measurement of (de)-carbonized part (requires UN-CSCAN)	UN-ISO898/1	
	ISO-2702 tap screw thread measurement	UN-ISO2702	
	User level management	UN-LEVMAN	STANDARD
	CHD, SHD, NHD configurator & graphic interface for analogue and digital micro meter stage only (not including full pattern editor)	UN-MCHD	
	CHD, SHD, NHD configurator & graphic interface requires: indent pattern configurator (TESTPAT01)	UN-PATCHD	
	Q-DAS Certified connectivity protocol	UN-QDAS	
	Advanced 3-axis communication protocol for robotic systems	UN-REMC	
	ISO bullets casings pattern configurator and reporting system	UN-SHELLCONF	
	ISO 9015 Weld pattern conifgurator (automatic weld pattern configurator), requires overview camera or AS9000-0.7OBJ	UN-WELDPAT	
	Vibration, temperature & humidity monotoring	UN-VIBCLC	
	Artificial Intelligence Deep Learning Brinell module	UN-AIDLB01	
	Barcode & QR data mapping software	UN-SCANFLOW	
	Metalloscope [™] Metallography software pack	UN-MSCPV1	
Connectivity Plus	Powerful external intel core i7 pc, with 16gb ram, and 512gb ssd drive Win- dows 10 pre-installed including wiring and integration with tester.	UN-SYSPCIMP01	
	Powerful external intel core i9 pc, with 16gb ram, and 512gb ssd drive Win- dows 10 pre-installed including wiring and integration with tester.	UN-SYSPCIMP02	
	Utility software; Import test results in MS applications like Excel	UN-SW/905	
	Bluetooth connectivity	UN-BTADAPT	
	Wireless system Keyboard & wireless mouse	UN-SKBSET	STANDARD
	Virtual joystick, on-screen		STANDARD
Additional items			
Machine stands	Cabinet test table with drawer for hardness testers 71x75x80cm	UN-STAND/960	
	Cabinet test table with drawer for hardness testers 150x75x80cm	UN-STAND/965	
	Seaworthy packing box for 950/960	PACK/100	
	Seaworthy packing box for 965	PACK/200	
Vibration isolation stage	Passive vibration isolation stage, broad spectrum	UN-AVS-150	
	Limit switch relocator	AS500XL-150-16	STANDARD
Printer	Laser Printer	UN-PRINT	
Projector	On request, any brand of choice	UN-PROJECTOR	
Machine cover	Machine cover 350x550x770mm	UN-COVER1	
CE Automation safety cabin	Front access safety cabin with light shield. Machines controls positioned outside cabin. External connectors for screen, keyboard etc.	SA-27-0002	
ISO 17025 UKAS	UKAS EN ISO 17025 Direct/Indirect calibration report	CCERTFEE/UKAS	
ISO 17025 UKAS ISO / ASTM Calibration	BRINELL direct and indirect calibration & certification, traceable, in compliance with ISO & ASTM, NADCAP. Flat fee for selected common scales, per scale.	CCERTUKAS/1B	
ISO 17025 UKAS ISO / ASTM Calibration	VICKERS direct and indirect calibration & certification, traceable, in compliance with ISO & ASTM, NADCAP. Flat fee for selected common scales, per scale.	CCERTUKAS//1V	
ISO 17025 UKAS ISO / ASTM Calibration	KNOOP direct and indirect calibration & certification, traceable, in compliance with ISO & ASTM, NADCAP. Flat fee for selected common scales, per scale.	CCERTUKAS/1K	

ACCESSORIES

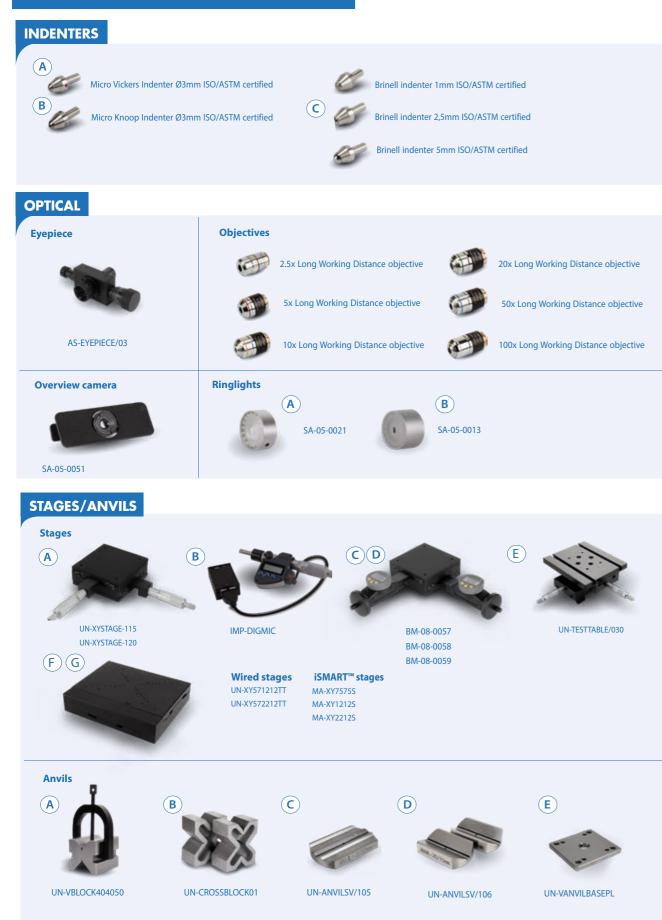

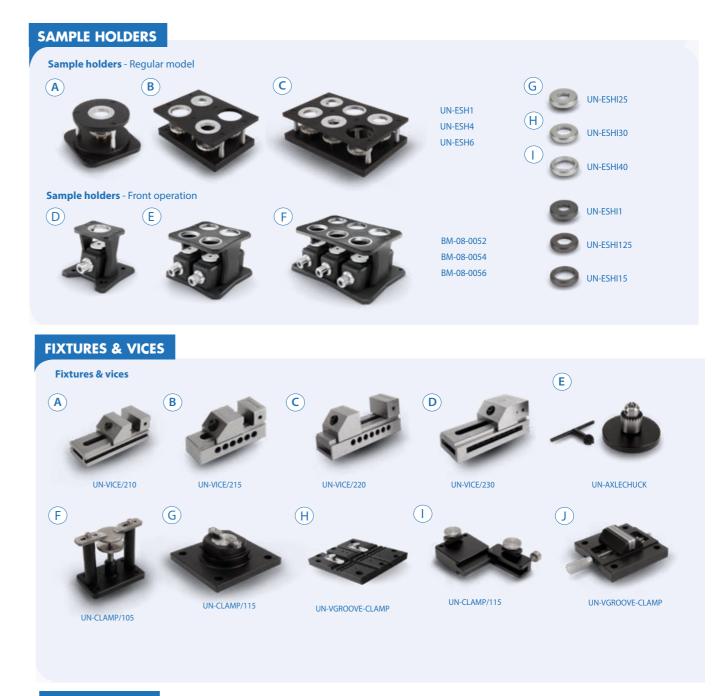

SAFETY CABIN

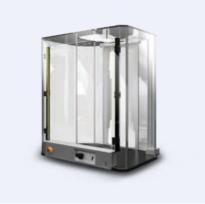

SPECIFICATIONS

HARDNESS SCALES

VICKERS ISO 6507 ASTM E384, E92 JIS B 7725 *Extended range	HV0.001 HV0.002 HV0.003 HV0.004 HV0.005 HV0.006 HV0.007 HV0.008 HV0.009 HV0.010 HV0.015 HV0.020 HV0.025 HV0.050 HV0.1 HV0.2 HV0.3 HV0.5 HV1 HV2 HV2.5 HV3 HV4 HV5 HV10 HV20 HV25 HV30 HV40 HV50 HV60 *(HV0.0001 - HV0.0009 increases with steps of HV 0.00005)
Kic Fracture toughness	All Vickers forces & scales
KNOOP ISO 4545 ASTM E92 JIS Z 2251	HK0.001 HK0.002 HK0.003 HK0.004 HK0.005 HK0.006 HK0.007 HK0.008 HK0.009 HK0.010 HK0.015 HK0.020 HK0.025 HK0.050 HK0.1 HK0.2 HK0.3 HK0.5 HK1 HK2 HK2.5 HK3 HK4 HK5
BRINELL ISO 6506, ASTM E10 JIS Z 2243	HBW1/1 HBW1/1.25 HBW1/2.5 HBW1/5 HB1/10 HBW1/30 HBW1/31.25 HBW2.5/6.25 HBW2.5/7.8125 HBW2.5/15.625 HBW2.5/31.25 HBW2.5/62.5 HBW5/25 HBW5/31.25 HBW5/62.5
CONVERSIONS	Conversion to other hardness scales according to ASTM E140, ISO 18265, GB/T 1172

TEST FORCE

F	Force application	Multi-load cell, closed loop, force feedback system
	Force range	0.1gf – 62.5kgf
	Test force tolerance	< 0.25% for test force 100gf to 62.5kgf
		< 0.5% for test force below 100gf
	Dwell time settings	Default 10 seconds, user defined. Up to 250 seconds

TURRET

	Motorized turret	Ultra-fast, 6 position turret,
	Objectives	Long working distance 2.5x
	Indenters	Certified indenters (ISO/AST
	Camera 1 (objective)	11 Mpx, HD, Machine vision
	Camera 2 (overview)	Full HD, Optical zoom system

SYSTEM

	Electronic system Standard (Recommended)	High performance embed MS Windows [®] 10 operated
	Electronic system (Optional)	High performance externa MS Windows® 10 operated
	CNC support	CNC controller (for motori
	Screen(s)	27" landscape mode capad
	Display resolution	0.01 HV, HK, HB
	Statistics	Total test, max, min, avera
	Hardness conversion	Rockwell, Rockwell Superf
	Software	IMPRESSIONS [™] V4, work fl
	Data storage capacity	Internal and external mSS
	Data output	XML, CSV, Certified for Q-DA
	Connectivity	5 USB ports, RJ45 Ethernet L connector, Dual HDMI screet
	Printer	A4, A3 full color laser print

GENERAL

Ο

	Machine dimension	775 mm x 351 mm x 528 m
	Workpiece accommodation	200mm (H) x 170mm (D)
	Machine weight	101 kg
	Power supply	100VAC to 240VAC, 50/60H
	Operating temperature	10°C to 35°C
	Power consumption	100W
	Humidity	10% to 90%, non-condensi

* Check individual warranty conditions

t, 2 indenter positions, 4 objective positions

5x, 5x, 10x, 20x, 50x, 100x

STM) available at choice

on system

tem, variable FOV 40 x 30 - 150 x 110mm

edded controller, i7, mSSD 120 GBxx,

ed , up to 8 years* INNOVATEST warranty

nal controller, i7 or i9, mSSD 120 GBxx,

ed, 1 year factory warranty

orized stages) or stage accessories

acitive touchscreen, second screen option

rage, range, standard deviation, All in real time after each test erficial, Vickers, Brinell, Knoop, Leeb & Tensile

flow system & tester control

SD, SSD or HDD

OAS (Optional)

LAN, W-LAN, RS-232, Blue Tooth, 5 Axis CNC & motorized X-Y stage

en connectors

nter (optional)


mm

)Hz, single phase

sing


TECHNICAL DRAWINGS

OTHER MODELS IN THE **FALCON RANGE**

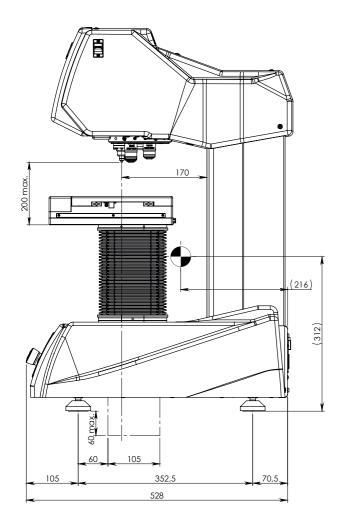

All dimensions in these drawings are in mm, approximate. Working heights and or workpiece accommodation varies depending on the stages and stage accessories used.

Please contact our sales department for more details.

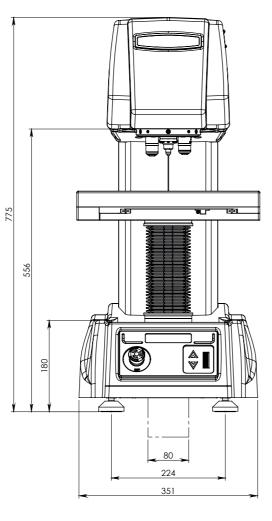





FALCON 400G2

Load Cell, Closed loop Micro/Macro Vickers, Knoop & Brinell Hardness testers With fine adjustable Z-axis side handwheel See brochure B22F400G2/XX

FALCON 450G2

Load Cell, Closed loop Macro/Micro Vickers, Knoop & Brinell Hardness tester With Z-axis handwheel See brochure B18F450/XX



FALCON 5000G2

Multi Load Cell, closed loop Fully automatic, 8 position turret, laser postioning. Micro/Macro Vickers, Knoop & Brinell Hardness testers. Descending test head, fixed work piece position See brochure B22F5000G2/XX



FALCON 600G2

Multi Load Cell, closed loop Fully automatic, free to configure Micro/Macro Vickers, Knoop & Brinell Hardness testers. With ball screw motorized Z-axis See brochure B22F600G2/XX

> Changes in products and/ or product specifications can emerge due to new technologies and continuous development.

We reserve the right to change or modify specifications of the products without prior notice. We recommend you to contact our sales office for up-to-date information.

Brochure B22F500G2/04/EN

EUROPE

INNOVATEST Deutschland GmbH. Sales & Service Phone: +49 245 670 59 500 info@innovatest-deutschland.com www.innovatest-deutschland.com

INNOVATEST France SARL

Sales & Service Phone: +33 1 848 88038 commercial@innovatest-france.com www.innovatest-france.com

INNOVATEST UK Ltd. Sales & Service Phone: +44 (0) 121 824 4775 info@innovatest-uk.com www.innovatest-uk.com

INNOVATEST Polska sp. z.o.o Sales & Service Phone: +48 697 099 826 info@innovatest-polska.pl www.innovatest-poland.com

MIDDLE EAST

INNOVATEST Middle East LLC Sales & Service Phone: +971 56 372 6114 info@innovatest-mideast.com www.innovatest-mideast.com

NORTH-AMERICA

INNOVATEST USA Inc. Sales & Service Phone: +1 267 317 4300 info@innovatest-usa.com www.innovatest-usa.com

ASIA

INNOVATEST Shanghai Co,. Ltd. Sales & Service Phone: +86 21 60906200 Fax: +86 21 60912595 info@innovatest-shanghai.com www.innovatest-shanghai.com

INNOVATEST Japan Co., Ltd. Sales & Service Phone: +81 3 3527 3092 Fax: +81 3 3527 3093 info@innovatest-japan.com www.innovatest-japan.com

INNOVATEST South East Asia Sales & Service Phone: +65 6451 1123 Fax: +65 6452 1011 info@innovatest-singapore.com www.innovatest-singapore.com Distributor :

CORPORATE HEAD OFFICE

INNOVATEST Europe BV

Manufacturing, Distribution & Service Borgharenweg 140 6222 AA MAASTRICHT The Netherlands

Phone: +31 43 3520060 Fax: +31 43 3631168 info@innovatest-europe.com www.innovatest-europe.com